



LUMIAX MODBUS

Communication Protocol V3.9



2019-3-7

LUMIAX
NO.192, Zhuzhou Road, Qingdao

Catalog

| | |
|---|----|
| 1.MODBUS communication instructions | 2 |
| 2.Features..... | 2 |
| 3.Modbus function codes | 2 |
| 4.Real-time parameters..... | 3 |
| 4.1For example..... | 12 |
| 4.1.1 example-1..... | 12 |
| 4.1.2 example-2..... | 13 |
| 5.Rated parameters..... | 14 |
| 5.1 For example..... | 15 |
| 6.Read only register | 16 |
| 6.1 For example..... | 19 |
| 7.Device Parameter..... | 20 |
| 7.1 For example..... | 21 |
| 7.1.1 Example-1..... | 21 |
| 7.1.2 Example-2(Forget ID)..... | 21 |
| 8.Battery and Load Parameter | 22 |
| 8.1 Limiting conditions of voltage parameters..... | 27 |
| 9 Other switches value | 28 |
| 10 Communication interface definition | 29 |
| 10.1 Magic Series Controller RJ11 PIN Connection..... | 29 |
| 10.2 MPPT-DC series RS485 interface | 29 |

1.MODBUS communication instructions

MODBUS is an application-layer messaging protocol, positioned at level 7 of the OSI model. It provides client/server communication between devices connected on different types of buses or networks.

MODBUS is a request/reply protocol and offers services specified by function codes. MODBUS function codes are elements of MODBUS request/reply PDUs. This protocol specification document describes the function codes used within the framework of MODBUS transactions.

As a master/slave protocol, there can only be one master station and one or more (up to 247) slaves on the bus at the same time. Modbus communication is always initiated by the master station. When the slave station does not receive a request from the master station, it does not send data. From the point where stations can not communicate with each other, the main station can only initiate a Modbus transaction.

2.Features

The communication protocol of Lumiax solar charge controller has the following characteristics:

1. The communication protocol uses the Modbus-RTU standard association.
2. The default ID of the solar charge controller is 1, the ID can be modified by PC serial port software.
3. All communications are RTU mode, communication parameters are as follow:
 - a) 9600 baud
 - b) 8 data bits
 - c) 1 stop bit
 - d) No parity
 - e) No flow control
4. The register address is in hexadecimal format and the base address offset is 0x00.
5. All 32-bit data is represented by two 16-bit-length registers, namely L and H registers.

for example: The actual value of the input power of the charging is 3000, the data multiple is 100 times, the values of the variable L register (address 0x3002) are 0x93E0 and H register (address 0x3003) are 0x0004.

3.Modbus function codes

| Function code | Designation |
|---------------|-------------------------------|
| 0x02 | Read the switch input status |
| 0x03 | Read Holding Registers |
| 0x04 | Read Input Register |
| 0x05 | Write Single Coil |
| 0x06 | Write a single hold register |
| 0x10 | Write multiple hold registers |

4. Real-time parameters

The real-time data and the real-time state of each parameter in the normal operation of the whole system, as well as the historical statistics of the power generation and the power consumption.

| serial num. | variable name | Address | Function Code | description | units | mulripl e |
|-------------|-------------------------------------|---------|---------------|---|-------|-----------|
| 1 | Equipment internal over temperature | 2000 | 02(R) | 1 The temperature in the machine exceeds the temperature protection value 0 The temperature in the machine is normal | | |
| 2 | Day or night | 200C | 02(R) | 1-night, 0-day | | |

| serial num. | variable name | Address | Function Code | description | units | mulripl e |
|-------------|--------------------------------|-------------------|---------------|---|-------|-----------|
| 1 | Controller functional status 1 | 3011 (0d12305) | 04(R) | D15~D12: (Maximum system voltage level for non - lithium electrical controller) 01H 12V 02H 24V 03H 36V 04H 48V D11~D8: (Minimum system voltage level of non - lithium - electric controller) 01H 12V 02H 24V 03H 36V 04H 48V D7~D4: (Controller series) 00H MT series 01H DC series 02H SMR series D3~D0: battery type 00H Lithium battery 01H Not Lithium battery | | |

| | | | | | | |
|---|--------------------------------|-------------------|-------|--|---|-----|
| | | | | | | |
| 2 | Controller functional status 2 | 3012 (0d12306) | 04(R) | Bit value meaning: 0H Do not set D15: Infrared function D14: Automatic power reduction-365 mode D13: 0°C Prohibit charging D12: grade of rated voltage D11: Overcharge recovery V of lithium battery D10: Overcharge protection V of lithium battery D9: floating charge voltage D8: equilibrium charge V D7: Strong charging V D6: Low V recovery voltage D5: Low voltage protection D4: Battery Type D3: Backlight Time D2: Device Time D1: Device ID D0: Device password | | |
| 3 | Controller functional status 3 | 3013 (0d12307) | 04(R) | Bit value meaning: 1H Exist This Mode 0H Don't Exist this mode D7: Six Time Frame Mode D6: Five Time Frame Mode D5: Timing Control D4: T0T Mode D3: Fixed Light Up Duration Mode; D2: D2D Mode D1: 24H Mode D0: Manual Operation Mode | | |
| 4 | Controller functional status 4 | 3014 (0d12308) | 04(R) | Reserved | | |
| 5 | LVD Min Setting Value | 3015 (0d12309) | 04(R) | LVD: Low voltage detect. Eg: MPPT2075-DCLi controller is 9V, mean 900. | V | 100 |
| 6 | LVD Max Setting Value | 3016 (0d12310) | 04(R) | Eg: MPPT2075-DCLi controller is 30V, mean 3000. | V | 100 |
| 7 | LVD default setting value | 3017 (0d12311) | 04(R) | Eg: MPPT2075-DCLi controller is 9V, mean 900. | V | 100 |

| | | | | | | |
|----|---|-------------------|-------|--|---|-----|
| 8 | LVR Min setting value | 3018 (0d12312) | 04(R) | LVR: Low voltage recovery. Eg: MPPT2075-DCLi controller is 9.6V, mean 960. | V | 100 |
| 9 | LVR Max Setting Value | 3019 (0d12313) | 04(R) | Eg: MPPT2075-DCLi controller is 31V, mean 3100. | V | 100 |
| 10 | LVR default setting value | 301A (0d12314) | 04(R) | Eg: MPPT2075-DCLi controller is 9.8V, mean 980. | V | 100 |
| 11 | CVT Min Setting Value for Li Series controller | 301B (0d12315) | 04(R) | CVT: Charge Target Voltage. Eg: MPPT2075-DCLi controller is 10V, mean 1000. | V | 100 |
| 12 | CVT Max Setting Value Li Series controller | 301C (0d12316) | 04(R) | Eg: MPPT2075-DCLi controller is 32V, mean 3200. | V | 100 |
| 13 | CVT default setting value Li Series controller | 301D (0d12317) | 04(R) | Eg: MPPT2075-DCLi controller is 12.6V, mean 1260. | V | 100 |
| 14 | CVR Min Setting Value Li Series controller | 301E (0d12318) | 04(R) | CVR: Charge recovery voltage. Eg: MPPT2075-DCLi controller is 9.2V, mean 920. | V | 100 |
| 15 | CVR Max Setting Value Li Series controller | 301F (0d12319) | 04(R) | Eg: MPPT2075-DCLi controller is 31.8V, mean 3180. | V | 100 |
| 16 | CVR default setting value Li Series controller | 3020 (0d12320) | 04(R) | Eg: MPPT2075-DCLi controller is 12.4V, mean 1240. | V | 100 |
| 17 | Day/Night Threshold voltage Min Setting Value | 3021 (0d12321) | 04(R) | Eg: MPPT2075-DCLi controller is 3.0V, mean 300. | V | 100 |
| 18 | Day/Night Threshold voltage Max Setting Value | 3022 (0d12322) | 04(R) | Eg: MPPT2075-DCLi controller is 20.0V, mean 2000. | V | 100 |
| 19 | Day/Night Threshold voltage default Setting Value | 3023 (0d12323) | 04(R) | Eg: MPPT2075-DCLi controller is 5.0V, mean 500. | V | 100 |

| | | | | | | |
|----|--|-------------------|-------|---|---|-----|
| 20 | Dimming Voltage Min Setting Value | 3024 (0d12324) | 04(R) | Eg: MPPT2075-DCLi controller is 10V, mean 1000. | V | 100 |
| 21 | Dimming Voltage Max Setting Value | 3025 (0d12325) | 04(R) | Eg: MPPT2075-DCLi controller is 32V, mean 3200. | V | 100 |
| 22 | Dimming Voltage default Setting Value | 3026 (0d12326) | 04(R) | Eg: MPPT2075-DCLi controller is 12.2V, mean 1220. | V | 100 |
| 23 | Load current Min Setting Value | 3027 (0d12327) | 04(R) | Eg: MPPT2075-DCLi controller is 0.15A, mean 15. | A | 100 |
| 24 | Load current Max Setting Value | 3028 (0d12328) | 04(R) | Eg: MPPT2075-DCLi controller is 6A, mean 600. | A | 100 |
| 25 | CVT and CVR max allow dropout voltage for Li-series controller | 3029 (0d12329) | 04(R) | Eg: MPPT2075-DCLi controller is 1.5V, mean 150. | V | 100 |
| 26 | CVT and CVR Min allow dropout voltage for Li-series controller | 302A (0d12330) | 04(R) | Eg: MPPT2075-DCLi controller is 0.2V, mean 20. | V | 100 |
| 27 | LVD and LVR Min allow dropout voltage | 302B (0d12331) | 04(R) | Eg: MPPT2075-DCLi controller is 0.6V, mean 60. | V | 100 |
| 28 | CVR and LVD & CVT and LVR Min allow dropout voltage | 302C (0d12332) | 04(R) | Eg: MPPT2075-DCLi controller is 0.2V, mean 20. | V | 100 |
| 29 | Slaver ID | 3030 (0d12336) | 04(R) | | | |
| 30 | The number of running days | 3031 (0d12337) | 04(R) | Every day 00: 00 add and 18hours add only once. | | |

| | | | | | | |
|----|-------------------------------|-------------------|-------|--|----|-----|
| 31 | Current battery voltage level | 3032 (0d12338) | 04(R) | Current battery voltage level connected to the system. 1200, 2400, 3600, 4800 respectively express 12V, 24V, 36V, 48V | V | 100 |
| 32 | Battery status | 3033 (0d12339) | 04(R) | D7~D4: 00H--Normal, 01H high temperature protection D3~D0: 00H Normal , 01H over voltage protection 02H Battery voltage is low 03H Low voltage protection | | |
| 33 | Charge Status | 3034 (0d12340) | 04(R) | D5: 0H Day,1H Night D4: 0H Normal, 1H Charge over-temperature D3~2 Charging status: 00H Not charging, 01H Float charge 02H Boost charge 03H Equal charge D1: 0H Normal, 1H fault; D0: 1H Charging, 0H Not charging。 | | |
| 34 | Discharge Status | 3035 (0d12341) | 04(R) | D13~D12 Output Power: 00- Light Load 01- Moderate load 02- Rated load 03- Overload D11: 0H-Normal, 1H-Short circuit D4: 0H-Normal, 1H-Hardware Protection D3: 0H-Normal, 1H Open circuit protection; D2: 0H-Normal, 1H-discharge over temperature D1: 0H Normal, 1H fault; D0: 1H-Discharging 0H-Not discharge | | |
| 35 | Environment Temperature | 3036 (0d12342) | 04(R) | Environment Temperature | °C | 100 |
| 36 | Device built-in temperature | 3037 (0d12343) | 04(R) | Internal temperature of the controller | °C | 100 |

| | | | | | | |
|----|--|-------------------|-------|---|---|-----|
| 37 | Over-discharge times | 3038 (0d12344) | 04(R) | | | |
| 38 | Fully-charged times | 3039 (0d12345) | 04(R) | | | |
| 39 | Over-voltage protection times | 303A (0d12346) | 04(R) | | | |
| 40 | Over-current protection times | 303B (0d12347) | 04(R) | | | |
| 41 | short-circuit protection times | 303C (0d12348) | 04(R) | | | |
| 42 | Open-circuit protection times | 303D (0d12349) | 04(R) | | | |
| 43 | Hardware protection times | 303E (0d12350) | 04(R) | | | |
| 44 | Charge over-temperature protection times | 303F (0d12351) | 04(R) | | | |
| 45 | Discharge over-temperature protection time | 3040 (0d12352) | 04(R) | | | |
| 46 | Battery remaining capacity | 3045 (0d12357) | 04(R) | Percentage of remaining battery capacity | % | 1 |
| 47 | Battery voltage | 3046 (0d12358) | 04(R) | Current battery voltage | V | 100 |
| 48 | Battery current | 3047 (0d12359) | 04(R) | Current battery current, Charging is positive, discharging is negative. | A | 100 |
| 49 | Battery power-L | 3048 (0d12360) | 04(R) | Battery power | W | 100 |
| 50 | Battery power-H | 3049 (0d12361) | 04(R) | | W | 100 |
| 51 | Load Voltage | 304A (0d12362) | 04(R) | Load Voltage | V | 100 |

| | | | | | | |
|----|--|-------------------|-------|---|-----|-----|
| 52 | Load current | 304B (0d12363) | 04(R) | Load current | A | 100 |
| 53 | Load power-L | 304C (0d12364) | 04(R) | Load power | W | 100 |
| 54 | Load power-H | 304D (0d12365) | 04(R) | | W | 100 |
| 55 | Solar voltage | 304E (0d12366) | 04(R) | The voltage of the solar panel. | V | 100 |
| 56 | Solar current | 304F (0d12367) | 04(R) | The current of the solar Panel. | A | 100 |
| 57 | Electricity generation power-L | 3050 (0d12368) | 04(R) | PV cell array current generated power | W | 100 |
| 58 | Electricity generation power-H | 3051 (0d12369) | 04(R) | | W | 100 |
| 59 | The charging capacity of the day | 3052 (0d12370) | 04(R) | Everyday 00: 00 reset. | KWH | 100 |
| 60 | Total charging capacity-L | 3053 (0d12371) | 04(R) | Cleared after overflow | KWH | 100 |
| 61 | Total charging capacity-H | 3054 (0d12372) | 04(R) | | KWH | 100 |
| 62 | The electricity consumption of the day | 3055 (0d12373) | 04(R) | everyday 00: 00 reset. | KWH | 100 |
| 63 | Total electricity consumption-L | 3056 (0d12374) | 04(R) | Cleared after overflow | KWH | 100 |
| 64 | Total electricity consumption-H | 3057 (0d12375) | 04(R) | | KWH | 100 |
| 65 | Total light time during the day | 3058 (0d12376) | 04(R) | Every 00:00 reset. | Min | |
| 66 | Total charging capacity-L during the month | 305D (0d12381) | 04(R) | There is no such item for the time being. | KWH | 100 |
| 67 | Total charging | 305E | 04(R) | | KWH | 100 |

| | | | | | | |
|-------|--|-------------------|-------|---|-----|-----|
| | capacity-H during the month | (0d12382) | | | | |
| 68 | Total charging capacity-L during the year | 305F (0d12383) | 04(R) | There is no such item for the time being. | KWH | 100 |
| 69 | Total charging capacity-H during the year | 3060 (0d12384) | 04(R) | | KWH | 100 |
| 70 | Charging capacity a day ago | 3061 (0d12385) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| 71 | Charging capacity two days ago | 3062 (0d12386) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| 72 | Charging capacity three days ago | 3063 (0d12387) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| 73 | Charging capacity four days ago | 3064 (0d12388) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| | | | | | | |
| 74 | Charging capacity sixty days ago | 309C (0d12444) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| 75 | The number of running days | 309D (0d12445) | 04(R) | Every day 00: 00 add. Same as address 3031. | | |
| 76 | Battery voltage | 30A0 (0d12448) | 04(R) | Current battery voltage | V | 100 |
| 77 | Battery current | 30A1 (0d12449) | 04(R) | Current battery current. Charging is positive, discharging is negative | A | 100 |
| 78 | Environment temperature | 30A2 (0d12450) | 04(R) | Environment temperature | °C | 100 |
| 79 | Battery status | 30A3 (0d12451) | 04(R) | Same as address 3033. | | |
| 80 | Charge Status | 30A4 (0d12452) | 04(R) | Same as address 3034. | | |
| 81 | Discharge Status | 30A5 (0d12453) | 04(R) | Same as address 3035. | | |
| 82 | over discharge | 30A6 (0d12454) | 04(R) | Battery low voltage protection times. | | |

| | | | | | | |
|----|--|-------------------|-------|-------------------------------------|---|-----|
| | times | | | | | |
| 83 | Fully charged times | 30A7 (0d12455) | 04(R) | The times of battery fully charged. | | |
| 84 | The highest battery voltage on that day | 30A8 (0d12456) | 04(R) | Every day 00: 00 reset. | V | 100 |
| 85 | The lowest battery voltage on that day | 30A9 (0d12457) | 04(R) | Every day 00: 00 reset. | V | 100 |
| 86 | The highest battery voltage a day ago | 30AA (0d12458) | 04(R) | Every day 00: 00 reset. | V | 100 |
| 87 | The highest battery voltage two days ago | 30AB (0d12459) | 04(R) | Every day 00: 00 reset. | V | 100 |
| | | | | | | |
| 88 | The highest battery voltage sixty days ago | 30E5 (0d12517) | 04(R) | Every day 00: 00 reset. | V | 100 |
| 89 | The lowest battery voltage a day ago | 30E6 (0d12518) | 04(R) | Every day 00: 00 reset. | V | 100 |
| 90 | The lowest battery voltage two days ago | 30E7 (0d12519) | 04(R) | Every day 00: 00 reset. | V | 100 |
| | | | | | | |
| 91 | The lowest battery voltage sixty days ago | 3121 (0d12577) | 04(R) | Every day 00: 00 reset. | V | 100 |
| 92 | Load Voltage | 3125 (0d12581) | 04(R) | The voltage of the load terminal. | V | 100 |
| 93 | Load current | 3126 (0d12582) | 04(R) | The current of the load terminal. | A | 100 |
| 94 | Load power-L | 3127 (0d12583) | 04(R) | Load power | W | 100 |
| 95 | Load power-H | 3128 | 04(R) | | W | 100 |

| | | | | | | |
|-----|--|-------------------|-------|---|-----|-----|
| | | (0d12584) | | | | |
| 96 | The electricity consumption of the day | 3129 (0d12585) | 04(R) | Every day 00: 00 reset. Same as address 3055. | KWH | 100 |
| 97 | Total electricity consumption-L | 312E (0d12590) | 04(R) | Cleared after accumulative overflow. | KWH | 100 |
| 98 | Total electricity consumption-H | 312F (0d12591) | 04(R) | | KWH | 100 |
| 99 | Electricity consumption a day ago | 3130 (0d12592) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| 100 | Electricity consumption two days ago | 3131 (0d12593) | 04(R) | | KWH | 100 |
| 101 | Electricity consumption three days ago | 3132 (0d12594) | 04(R) | | KWH | 100 |
| 102 | Electricity consumption four days ago | 3133 (0d12595) | 04(R) | | KWH | 100 |
| | | | | | | |
| 103 | Electricity consumption sixty days ago | 316B (0d12651) | 04(R) | Every day 00: 00 reset. | KWH | 100 |
| 104 | The number of running days | 316C (0d12652) | 04(R) | Every day 00: 00 add. Same as address 3031 & 309D. | | |

4.1For example

4. 1. 1 example-1

Read ID is 1, the data of address is 0X3011 (0d12305), read quantity is 28:

Send instructions: 01 04 30 11 00 1C AE C6

Analysis: 01 Equipment ID

04 Function code

30 11 To read the address starting bi

00 1C The number of addresses to read (Start of 0x3011)

AE C6 CRC Check

RCV: 01 04 38 41 01 13 F7 00 0F 00 00 04 38 04 B0 04 60 04 74 05 00 04
B0 00 00 00 00 00 00 00 00 00 00 00 00 01 2C 03 20 03 20 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 3C 00 00 B1 B7

Analysis: 01 Equipment ID

04 Function code

38 56 bytes

41 01 Read data to address 0x3011 (0d12305) (controller functional status
1)

13 F7 Read data to address 0x3012 (0d12306) (controller functional state 2)

00 0F Read data to address 0x3013 (0d12307) (controller functional state 3)

00 00 Read data to address 0x3014(0d12308) (controller functional state 4)

04 38 Read data to address 0x3015 (0d12309) (LVD minimum set value)

04 B0

04 60

04 74

05 00

04 B0

00 00

00 00

00 00

00 00

00 00

01 2C

03 20

03 20

00 00

00 00

00 00

00 00

00 00

00 00

00 00

00 3C

00 00 Read data to address 0x302C (0d12332) (minimum allowable pressure difference between CVR and LVD and CVT and LVR)

B1 B7 CRC Check

4. 1. 2 example-2

Read ID is 1, the data of address is 0X3030(0d12336), read quantity is 40.

Send instructions: 01 04 30 30 00 28 FF 1B

Analysis: 01 Equipment ID
 04 function code
 30 30 To read the address starting bit
 00 28 The number of addresses to read (start at 0x3030)
 FF 1B CRC Check

RCV: 01 04 50 00 01 00 00 09 60 00 00 00 20 00 01 09 C4
 0B 54 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 00 00 00 00 00 00 00 00 00 00 00 00 00 00 1F 09 24 00 00
 00 00 00 00 09 24 00 00 00 00 00 00 00 02 44 00 00 00
 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 70 04

Analysis:

01 Equipment ID
 04 function code
 50 80 bytes
 00 01 Read data to address 0x3030 (0d12336) (slave ID)
 00 00

09 60
 00 00
 00 20
 00 01
 09 C4
 0B 54

 00 00
 70 04 CRC Check

5.Rated parameters

Rated parameters of controller when leaving factory.

| serial num. | variable name | Address | Function code | Describe | units | multi ple |
|-------------|-----------------------|-------------------|---------------|-----------------------|-------|-----------|
| 1 | PV rated voltage | 3000 (0d12288) | 04(R) | PV rated voltage | V | 100 |
| 2 | PV rated current | 3001 (0d12289) | 04(R) | PV rated current | A | 100 |
| 3 | PV rated power-L | 3002 (0d12290) | 04(R) | PV rated power | W | 100 |
| 4 | PV rated power-H | 3003 (0d12291) | 04(R) | | W | 100 |
| 5 | Battery rated voltage | 3004 (0d12292) | 04(R) | Battery rated voltage | V | 100 |
| 6 | Battery rated current | 3005 (0d12293) | 04(R) | Battery rated current | A | 100 |

| | | | | | | |
|----|-----------------------|-------------------|-------|---------------------|---|-----|
| 7 | Battery rated power-L | 3006 (0d12294) | 04(R) | Battery rated power | W | 100 |
| 8 | Battery rated power-H | 3007 (0d12295) | 04(R) | | W | 100 |
| 9 | Load rated voltage | 3008 (0d12296) | 04(R) | Load rated voltage | V | 100 |
| 10 | Load rated current | 3009 (0d12297) | 04(R) | Load rated current | A | 100 |
| 11 | Load rated power-L | 300A (0d12298) | 04(R) | Load rated power | W | 100 |
| 12 | Load rated power-H | 300B (0d12299) | 04(R) | | W | 100 |

5.1 For example

Read ID is 1, the data of address is 0X3000(0d12288), read quantity is 1.

Send instructions: 01 04 30 00 00 01 3E CA

Analysis: 01 Device ID
 04 Function code
 30 00 To read the address starting bit
 00 01 Number of addresses to read (start at 0x3000)
 3E CA CRC check

RCV: 01 04 02 17 70 B7 24

Analysis: 01 Device ID
 04 Function code
 02 Two bytes
 17 70 Read the data to address 0x3000 (0x1770 decimal 6000 with a multiple of 100 and an actual value of 60)
 B7 24 CRC check

6. Read only register

To facilitate Bluetooth and NB-IOT operation, the following read-only retention registers can be added to reduce the number of communication.

| Serial num. | variable name | Address | Functi on code | Describe | units | multi ple |
|-------------|------------------------------|-------------------|----------------|--|-------|-----------|
| 1 | Controller function status 1 | 8FF0 (0d36848) | 03(R) | D15~D12: (Maximum voltage level of non lithium battery controller) 01H 12V, 02H 24V, 03H 36V 04H 48V. D11~D8: (Minimum voltage level of non lithium battery controller) 01H 12V, 02H 24V, 03H 36V 04H 48V. D7~D4: (Controller series) 00H MT series, 01H DC series, 02H SMR series. D3~D0: (battery type) 00H Li-Series 01H Non Lithium series | | |
| 2 | Controller function status 2 | 8FF1 (0d36849) | 03(R) | Bit value implication: 1H- This parameter can be set up. 0H-This parameter can not be set up. D15: Infrared Function. D14: Auto dimming-365 mode. D13: 0°C Charging. D12: grade of rated voltage. D11: Charge recovery voltage of lithium. D10: Charge target voltage of lithium D9: Float voltage D8: Equal voltage D7: Boost voltage | | |

| | | | | | | |
|----|------------------------------|-------------------|-------|---|---|-----|
| | | | | D6: Low voltage recovery voltage D5: Low voltage protection D4: type of battery D3: Backlight Time D2: Device Time D1: Device ID D0: Device Password | | |
| 3 | Controller function status 3 | 8FF2 (0d36850) | 03(R) | Bit value implication: 1H-Exist this mode 0H-Don't Exist this mode D7: Six period mode D6: Five period mode D5: Time Control D4: T0T Mode D3: Fixed lighting time mode D2: D2D Mode; D1: 24H Mode; D0: Manual Operation Mode. | | |
| 4 | Controller function status 4 | 8FF3 (0d36851) | 03(R) | Reserved | | |
| 5 | LVD Min setting value | 8FF4 (0d36852) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 6 | LVD Max Setting Value | 8FF5 (0d36853) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 7 | LVD Default Setting Value | 8FF6 (0d36854) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 8 | LVR Min setting value | 8FF7 (0d36855) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 9 | LVR Max Setting Value | 8FF8 (0d36856) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 10 | LVR Default Setting Value | 8FF9 (0d36857) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 11 | CVT Min Setting Value | 8FFA (0d36858) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 12 | CVT Max Setting Value | 8FFB (0d36859) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 13 | CVT default setting value | 8FFC (0d36860) | 03(R) | Suitable for lithium series controller. | V | 100 |

| | | | | | | |
|----|--|-------------------|-------|---|---|-----|
| 14 | CVR Min Setting Value | 8FFD (0d36861) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 15 | CVR Max Setting Value | 8FFE (0d36862) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 16 | CVR default setting value | 8FFF (0d36863) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 17 | Day/Night Threshold voltage Min Setting Value | 9000 (0d36864) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 18 | Day/Night Threshold voltage Max Setting Value | 9001 (0d36865) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 19 | Day/Night Threshold voltage default Setting Value | 9002 (0d36866) | 03(R) | Suitable for lithium series controller. | V | 100 |
| 20 | Dimming Voltage Min Setting Value | 9003 (0d36867) | 03(R) | | V | 100 |
| 21 | Dimming Voltage Max Setting Value | 9004 (0d36868) | 03(R) | | V | 100 |
| 22 | Dimming Voltage default Setting Value | 9005 (0d36869) | 03(R) | | V | 100 |
| 23 | Load current Min Setting Value | 9006 (0d36870) | 03(R) | | A | 100 |
| 24 | Load current Max Setting Value | 9007 (0d36871) | 03(R) | | A | 100 |
| 25 | Current battery voltage level | 9008 (0d36872) | 03(R) | Current System Battery Voltage Level. 1200, 2400, 3600, 4800 respectively 12V, 24V, 36V, 48V | V | 100 |
| 26 | CVT and CVR max allow dropout voltage for Li-series controller | 9009 (0d36873) | 03(R) | | V | 100 |

| | | | | | | |
|----|---|-------------------|-------|--|---|-----|
| 27 | CVT and CVR Min allow dropout voltage for Li-series controller | 900A (0d36874) | 03(R) | | V | 100 |
| 28 | LVD and LVR Min allow dropout voltage | 900B (0d36875) | 03(R) | | V | 100 |
| 29 | CVR and LVD & CVT and LVR Min allow dropout voltage | 900C (0d36876) | 03(R) | | V | 100 |

6.1 For example

Read ID is 1, the data of address is 0XFF0(0d36848), read quantity is 29.

Send instructions: 01 03 8F F0 00 1D AF 24

Analysis: 01 Device ID
 03 Function Code
 8F F0 To read the address starting bit
 00 1D The number of addresses to read (start at 0xFF0)
 AF 24 CRC Check

RCV: 01 03 3A 41 01 13 F7 00 0F 00 00 04 38 04 B0 04 60 04 74
 05 00 04 B0 00 00 00 00 00 00 00 00 00 00 00 01 2C 03 20
 03 20 00 00 00 00 00 00 00 00 00 00 09 60 00 00 00 00 00 3C
 00 00 7B B4

Analysis: 01 Device ID
 03 Function Code
 3A 58 Byte
 41 01 Read data to address 0xFF0 (controller functional state 1)
 7B B4 CRC Check

7.Device Parameter

The controller has the default ID number of "1". The ID can be modified by PC serial port software with a range of 1~247.

| serial num. | variable name | Address | Function code | Describe | units | multi ple |
|-------------|-----------------|-------------------|-------------------------|---|-------|-----------|
| 1 | Real-time Clock | 9017 (0d36887) | 03(R) 06(W) 10(W) | Second。 | | |
| 2 | Real-time Clock | 9018 (0d36888) | 03(R) 06(W) 10(W) | Minute。 | | |
| 3 | Real-time Clock | 9019 (0d36889) | 03(R) 06(W) 10(W) | Time。 | | |
| 4 | Real-time Clock | 901A (0d36890) | 03(R) 06(W) 10(W) | Day。 | | |
| 5 | Real-time Clock | 901B (0d36891) | 03(R) 06(W) 10(W) | Month。 | | |
| 6 | Real-time Clock | 901C (0d36892) | 03(R) 06(W) 10(W) | Year(Years' Lower Two Digits, Range 0~99)。 | | |
| 7 | Baud rate | 901D (0d36893) | 03(R) 06(W) 10(W) | D3~D0: 00H 4800 01H 9600(Currently fixed 9600, can not be changed) 02H 19200 03H 57600 04H 115200 | | |
| 8 | Backlight Time | 901E (0d36894) | 03(R) 06(W) 10(W) | LCD backlight delay after the number of seconds of this setting be off, range 0~600. | S | |
| 9 | Device Password | 901F (0d36895) | 03(R) 06(W) 10(W) | Four Password Value: Top Digit Third second lowest order D15~12, Password highest D11~8, Password Third D5~4, Password Second D3~0, Password lowest | | |

| | | | | | | |
|----|----------|-------------------|-------------------------|--|--|--|
| 10 | Slave ID | 9020 (0d36896) | 03(R) 06(W) 10(W) | Range1~247. If you forget ID, you can use address 254 to get device ID. | | |
|----|----------|-------------------|-------------------------|--|--|--|

7.1 For example

7.1.1 Example-1

Read ID is 1, Data with address 0x9017, the number of reads is 10

Send instructions: 01 03 90 17 00 0A 58 C9

Analysis: 01 Device ID
03 Function Code
90 17 To read the address starting bit
00 0A The number of addresses to read (starting at 0x9017)
58 C9 CRC Check

RCV: 01 03 14 00 34 00 24 00 00 00 01 00 01 00 12
00 01 00 00 00 00 00 01 45 85

Analysis: 01 Device ID
03 Function Code
14 20 个 Byte
00 34 Read data to address 0x9017 (Real time clock-second)
.....
45 85 CRC Check

7.1.2 Example-2(Forget ID)

If you forget the ID, you can use the following instruction to read the ID of the controller:

Send instructions: FE 03 90 20 00 01 BC CF

Analysis: FE Query ID Instruction
03 Function Code
90 20 To read the address starting bit
00 01 The number of addresses to read (Starting from 0 x3000)
BC CF CRC Check

RCV: 01 03 02 00 01 79 84

Analysis: 01 Device ID
03 Function Code
02 Two Byte
00 01 Read the data to address 0x9020 (Device ID)
79 84 CRC Check

8.Battery and Load Parameter

The Battery type is selected to set the corresponding parameters, mainly for some special voltage points reasonable Settings.

Set the corresponding Load control mode for the actual situation to achieve the best use effect of Load.

| serial num | variable name | Address | Function code | Describe | units | multiple |
|------------|------------------------|-------------------|-------------------------|--|-------|----------|
| 1 | Battery Type | 9021 (0d36897) | 03(R) 06(W) 10(W) | 0000H-Lithium Series 0001H-Liquid 0002H-GEL 0003H-AGM | | |
| 2 | Low voltage Protection | 9022 (0d36898) | 03(R) 06(W) 10(W) | Set Range: Non lithium battery: Voltage Range 1080-1180 (According to 12V system settings); Lithium series: 800-6000 (It depends on the controller, eg: MPPT2075-DCLi is 900-3000。)。 | V | 100 |
| | | | | Non lithium battery: Capacity range 1-5, corresponding to Soc1~Soc5 | | |
| 3 | Low voltage recovery | 9023 (0d36899) | 03(R) 06(W) 10(W) | Set Range: Non lithium battery: Voltage control range:1140-1280 (According to 12V system settings) Lithium series: 860-6100 (It depends on the controller, eg: MPPT2075-DCLi is 960-3100) | V | 100 |
| 4 | Boost voltage | 9024 (0d36900) | 03(R) 06(W) 10(W) | Boost voltage set range:1400-1480 (suitable for Liquid, Gel and AGM battery. According to 12V system settings) | V | 100 |
| 5 | Equalizing voltage | 9025 (0d36901) | 03(R) 06(W) 10(W) | Equalizing voltage setting range: 1400-1500(suitable for Liquid and AGM battery. According to 12V system settings) | V | 100 |
| 6 | Float voltage | 9026 (0d36902) | 03(R) 06(W) 10(W) | Float voltage set range:1300-1450 (suitable for Liquid, Gel and AGM battery. According to 12V system settings) | V | 100 |

| | | | | | | |
|----|---|-------------------|-------------------------|---|---|-----|
| 7 | System Rated Voltage Level | 9027 (0d36903) | 03(R) 06(W) 10(W) | 0- Automatic Identification 1-9 representative 12V/24V/36V/48V/60V/ 110V/120V/220V/240V. When the system voltage is specified, the controller will no longer automatically recognize it. | | |
| 8 | Charge target voltage for Lithium | 9028 (0d36904) | 03(R) 06(W) 10(W) | Set Range: 1000-6200(It depends on the controller, eg: MPPT2075-DCLi is 1000-3200) | V | 100 |
| 9 | Charge recovery voltage for Lithium | 9029 (0d36905) | 03(R) 06(W) 10(W) | Set Range: 850-6180 (It depends on the controller, eg: MPPT2075-DCLi is 920-3180) | V | 100 |
| 10 | 0°C Charging | 902A (0d36906) | 03(R) 06(W) 10(W) | D3~D0: 00H-Normal Charging 01H-No Charging 02H-Slow Charging Suitable for Lithium series controller. | | |
| 11 | Load Mode for MT series controller | 902B (0d36907) | 03(R) 06(W) 10(W) | Suitable for MT series Controller. 0-12 representative: 0---Always on mode. 1--- Dusk to dawn Mode(D2D) 2~9--- Night Light on time 2~9 hours 10--- Manual Mode(Default: Load On) 11---T0T mode 12--- Timing Switch | | |
| 12 | MT Series Manual Control mode, Default Setting On/Off | 902C (0d36908) | 03(R) 06(W) 10(W) | 0-On, 1-Off | | |
| 13 | MT Series Timing Opening Period 1 | 902D (0d36909) | 03(R) 06(W) 10(W) | The length of the first period of load output, D15~D8: Hour D7 ~ D0: Minute, Suitable for light threshold and timing | | |

| | | | | | | |
|----|--|-------------------|-------------------------|--|------|--|
| 14 | MT Series Timing Opening Period 2 | 902E (0d36910) | 03(R) 06(W) 10(W) | The length of the second period of load output, D15~D8: Hour D7 ~ D0: Minute, Suitable for light threshold and timing | | |
| 15 | Timed start time 1- seconds | 902F (0d36911) | 03(R) 06(W) 10(W) | Timing start time of load output. Suitable for controller with timing function. | sec | |
| 16 | Timed start time 1- minute | 9030 (0d36912) | 03(R) 06(W) 10(W) | Timing start time of load output. Suitable for controller with timing function. | Min | |
| 17 | Timed start time 1-hour | 9031 (0d36913) | 03(R) 06(W) 10(W) | Timing start time of load output. Suitable for controller with timing function. | hour | |
| 18 | Timed off time 1- seconds | 9032 (0d36914) | 03(R) 06(W) 10(W) | Timing off time of load output. Suitable for controller with timing function. | sec | |
| 19 | Timed off time 1- minute | 9033 (0d36915) | 03(R) 06(W) 10(W) | Timing off time of load output. Suitable for controller with timing function. | Min | |
| 20 | Timed off time 1-hour | 9034 (0d36916) | 03(R) 06(W) 10(W) | Timing off time of load output. Suitable for controller with timing function. | hour | |
| 21 | Timed start time 2- seconds | 9035 (0d36917) | 03(R) 06(W) 10(W) | Timing start time of load output. Suitable for controller with timing function. | sec | |
| 22 | Timed start time 2- minute | 9036 (0d36918) | 03(R) 06(W) 10(W) | Timing start time of load output. Suitable for controller with timing function. | Min | |
| 23 | Timed start time 2-hour | 9037 (0d36919) | 03(R) 06(W) 10(W) | Timing start time of load output. Suitable for controller with timing function. | hour | |
| 24 | Timed off time 2- seconds | 9038 (0d36920) | 03(R) 06(W) 10(W) | Timing off time of load output. Suitable for controller with timing function. | sec | |
| 25 | Timed off time 2- minute | 9039 (0d36921) | 03(R) 06(W) 10(W) | Timing off time of load output. Suitable for controller with timing function. | Min | |
| 26 | Timed off time 2-hour | 903A (0d36922) | 03(R) 06(W) 10(W) | Timing off time of load output. Suitable for controller with timing function. | hour | |

| | | | | | | |
|----|---|-------------------|-------------------------|---|-----|-----|
| 27 | Time control period selection | 903B (0d36923) | 03(R) 06(W) 10(W) | Record the time period selected by the load. 0 - use 1 period, 1 - use 2 periods. Suitable for controller with timing function. | | |
| 28 | Light controlled dark voltage | 903C (0d36924) | 03(R) 06(W) 10(W) | Solar panel voltage below this value is considered close to night. Non lithium battery set range is 300-1000 (According to 12V system settings) Lithium series set range: 300-2000 (It depends on the controller. eg: MPPT2075-DCLi is 300-2000) | V | 100 |
| 29 | Day/Night Delay time | 903D (0d36925) | 03(R) 06(W) 10(W) | Set Range: 0-30. | Min | |
| 30 | DC series timing control time 1 dimming | 903E (0d36926) | 03(R) 06(W) 10(W) | 0-10 representative 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100 | % | |
| 31 | DC series timing control time 2 dimming | 903F (0d36927) | 03(R) 06(W) 10(W) | 0-10 representative 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100 | % | |
| 32 | DC Series Time1 | 9040 (0d36928) | 03(R) 06(W) 10(W) | Time1 setting range: 0-15 representative 0, 30, 60, 90, 120, 150, 180, 210, 240, 270, 300, 330, 360, 390, 420 (In the case of SMR series, it is 24H mode), 450(D2D mode) | Min | |
| 33 | DC Series the Time1 dimming | 9041 (0d36929) | 03(R) 06(W) 10(W) | Time1 dimming setting range: 0-10 representative 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100 | % | |
| 34 | DC Series Time2 | 9042 (0d36930) | 03(R) 06(W) 10(W) | Time2 setting range: 0-15 representative 0, 30, 60, 90, 120, 150, 180, 210, 240, 270, 300, 330, 360, 390, 420, 450 | Min | |
| 35 | DC Series the Time2 dimming | 9043 (0d36931) | 03(R) 06(W) 10(W) | Time2 dimming setting range: 0-10 representative 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100 | % | |

| | | | | | | |
|----|------------------------------|-------------------|-------------------------|--|-----|-----|
| 36 | DC Series Time3 | 9044 (0d36932) | 03(R) 06(W) 10(W) | Time3 setting range: 0-15 representative 0, 30,60,90,120, 150, 180,210,240,270,300,330,360,390,4 20,450 | Sec | |
| 37 | DC Series the Time3 dimming | 9045 (0d36933) | 03(R) 06(W) 10(W) | Time3 dimming setting range: 0-10 representative 0,10,20,30,40,50,60, 70,80,90,100 | % | |
| 38 | DC Series Time4 | 9046 (0d36934) | 03(R) 06(W) 10(W) | Time4 setting range: 0-15 representative 0,30,60,90,120,150, 180,210,240,270,300,330,360,390,4 20, TOT | Sec | |
| 39 | DC Series the Time4 dimming | 9047 (0d36935) | 03(R) 06(W) 10(W) | Time4 dimming setting range: 0-10 representative 0,10,20,30,40,50,60, 70,80,90,100 | % | |
| 40 | DC Series Time5 | 9048 (0d36936) | 03(R) 06(W) 10(W) | Time3 setting range: 0-15 representative 0, 30,60,90,120, 150, 180,210,240,270,300,330,360,390,4 20,450 | Sec | |
| 41 | DC Series the Time5 dimming | 9049 (0d36937) | 03(R) 06(W) 10(W) | Time5 dimming setting range: 0-10 representative 0,10,20,30,40,50,60, 70,80,90,100 | % | |
| 42 | DC Series Load current | 904A (0d36938) | 03(R) 06(W) 10(W) | Setting Range: 10-1000 (It depends on the controller) | A | 100 |
| 43 | DC Series Auto Dimming | 904B (0d36939) | 03(R) 06(W) 10(W) | D3~D0: 00H Auto Dimming , 01H 365 mode, 02H/03H Don't Dimming. | | |
| 44 | DC Series Dimming Voltage | 904C (0d36940) | 03(R) 06(W) 10(W) | Setting Range: Non lithium:1180-1250(According to 12V system settings) Lithium:1000- Over-charged target Voltage(It depends on the controller) | V | 100 |
| 45 | DC Series Dimming percentage | 904D (0d36941) | 03(R) 06(W) 10(W) | Setting Range: 1-20 | % | |

| | | | | | | |
|----|--|-------------------|-------------------------|---|-----|-----|
| 46 | Sensing delay off time | 904E (0d36942) | 03(R) 06(W) 10(W) | Intelligent Induction Controller has no time delay to turn off the lights. Scope can be set: 1-15 corresponding, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100,110,120,130,140,150. | Sec | |
| 47 | Dimming of Infrared Series controller when no people | 904F (0d36943) | 03(R) 06(W) 10(W) | Dimming when no people, can be set range: 0-10 corresponds to 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100. | % | |
| 48 | Light controlled switch | 9052 (0d36946) | 03(R) 06(W) 10(W) | 0-off, 1-on. | | |
| 49 | Light-control led daybreak voltage | 9053 (0d36947) | 03(R) 06(W) 10(W) | Solar panel voltage above this voltage is considered close to daytime. Lead-acid series are set in accordance with 12V system, and can be set in 310-1100. Lithium series can be set range: 310-2100(The specific scope depends on the controller.) | V | 100 |
| 50 | Dimming percentage | 9054 (0d36948) | 03(R) 06(W) 10(W) | Dimming ratio for load test, ranging from 0 to 100. | % | |

8.1 Limiting conditions of voltage parameters

- 1 The low voltage recovery voltage should be at least 0.6V higher than the low voltage protection voltage.
- 2 Dimming voltage Should not be higher than the charge target voltage;
- 3 The recovery voltage should be at least 0.2V higher than the low voltage protection voltage.
- 4 The charging target voltage should be at least 0.2V higher than the low voltage recovery voltage.

9 Other switches value

| serial num | variable name | Address | Function code | Describe |
|------------|--|---------|---------------|--|
| 1 | Manual control switch | 0 | 05(W) | 1-Manual turn on output state 0-Manual turn off output state The Magic series takes effect only in manual mode. |
| 2 | test key on/off | 1 | 05(W) | 1 Trigger once test key 0 Normal work |
| 3 | DC Series Timing Control Mode Switch | 2 | 05(W) | 1 Open Timing Control 0 Close Timing Control |
| 4 | Manual control charging switch | 3 | 05(W) | 1 Manual turn on charging 0 Manual shutdown charging |
| 5 | Restore system default value | 8 | 05(W) | 1 yes, Restore system is factory default setting (The ID is also restored as the default value, Password reset); 0 no |
| 6 | Clear running days, Power generation or consumption WH, historical minimum maximum voltage | 9 | 05(W) | 1-Clear Device statistic. |
| 7 | Clear all protection and fully charged times | 10 | 05(W) | 1-Clear. |
| 8 | Clear charge /Discharge AH | 11 | 05(W) | 1-Clear. |
| 9 | Clear all of the above historical data | 12 | 05(W) | 1-Clear. |

For example(Restore system default value)

Send instructions: 01 05 00 08 FF 00 0D F8

Analysis: 01 Device ID
 05 Function Code
 00 08 send address
 FF 00 Send data (enable to restore default)
 0D F8 CRC Check

RCV: 01 05 00 08 FF 00 0D F8

Analysis: 01 Device ID


| | |
|-------|-------------------|
| 05 | Function Code |
| 00 08 | Receiving address |
| FF 00 | RXD |
| 0D F8 | CRC Check |

10 Communication interface definition

10.1 Magic Series Controller RJ11 PIN Connection

Interface pin definition:

| Pin No | Definition |
|--------|------------|
| 1 | NC |
| 2 | NC |
| 3 | RS-485-A |
| 4 | RS-485-B |
| 5 | NC |
| 6 | NC |

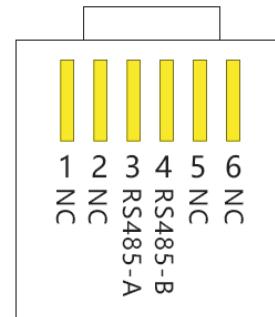

10.2 MPPT-DC series RS485 interface

The controller RS485 interface is drawn through the four core waterproof terminal, and the interface pin is defined:

| Wire | Defined |
|-------|---------|
| Brown | NC |
| Black | NC |
| Blue | RS485-A |
| Green | RS485-B |